



# Motorola Moto X Rear Facing Camera Flash Replacement

Replace the flash assembly for the rear-facing camera of a Motorola Moto X.

Written By: Sam Lionheart



## INTRODUCTION

Use this guide to replace the rear-facing camera flash in your Motorola Moto X.

---



### TOOLS:

- [SIM Card Eject Tool](#) (1)
  - [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — SIM Card



- Insert the SIM card eject tool into the hole in the side of the SIM card tray and push to eject the tray.
  - Remove the SIM card tray.
- i** If the SIM card does not fall free from the tray on its own, simply remove it with your fingers.

## Step 2 — Back Cover Assembly



- i** In the following steps you will be releasing the clips holding the phone's cases together. However, the back case is also secured with an adhesive pad. After separating the clips you will use an iOpener to allow the case to fully open. **Do not** attempt to fully open the phone before loosening the adhesive.
- Insert a plastic opening tool into the seam between the front and rear covers near the SIM card slot.
  - Slide the plastic opening tool along the seam toward the upper corner.



## Step 3




- Carefully slide the plastic opening tool around the corner, freeing it from clips.

## Step 4




- Run the plastic opening tool along the seam nearest the headphone jack on the top of the phone.

## Step 5

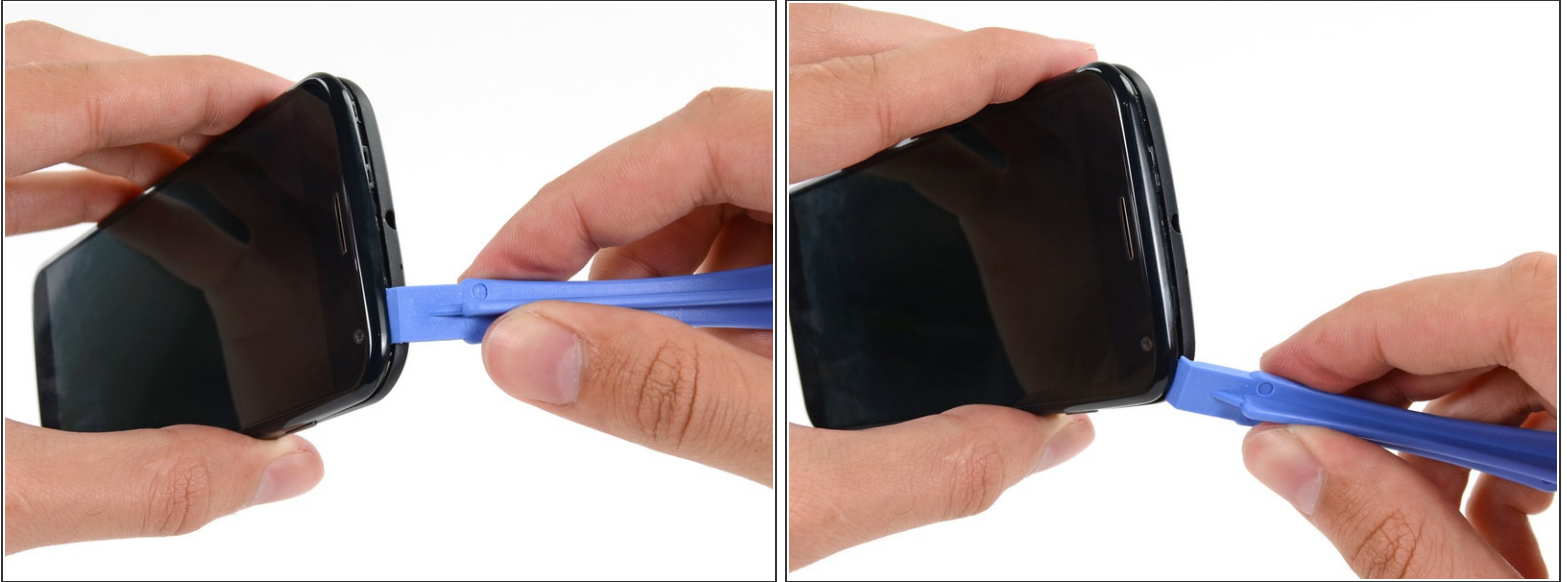


- Pry around the top right corner of the phone between the two covers.

## Step 6

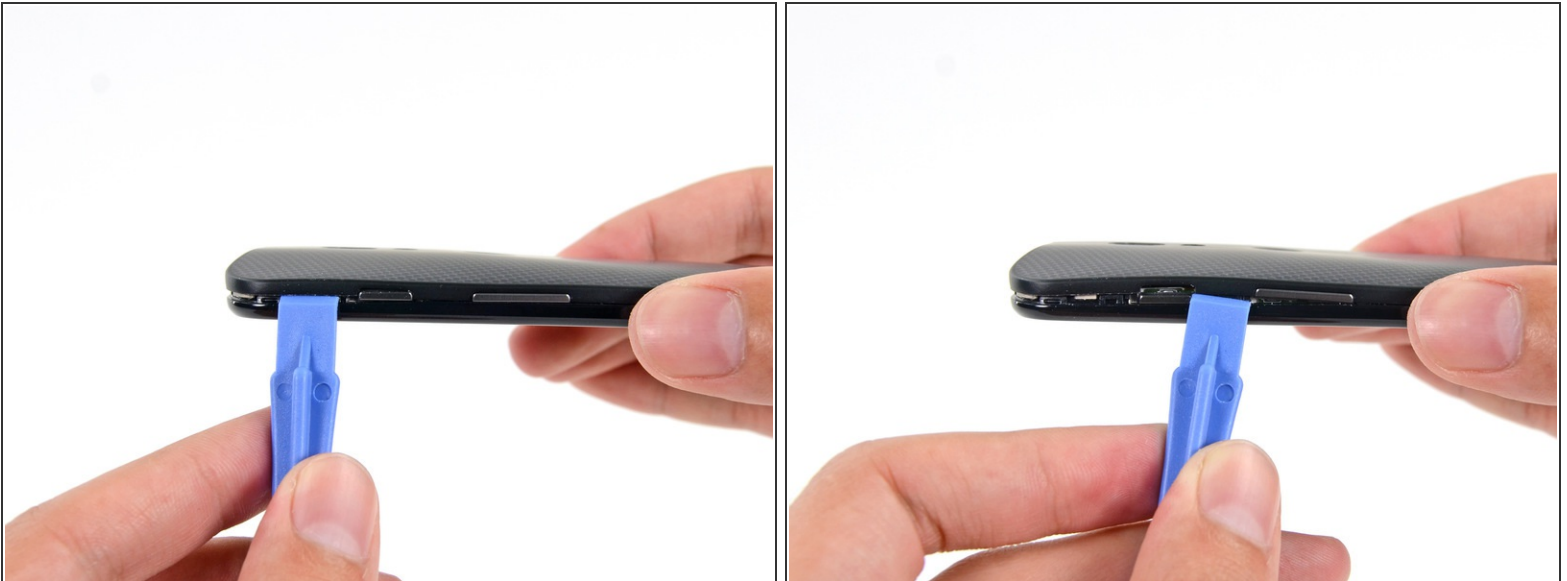

- Carefully slide the opening tool along the button side of the phone.

 The plastic on the front cover is thinner here and the buttons may move around; go slowly to avoid damaging the buttons or the front cover.

## Step 7



- Insert a plastic opening tool into the seam just below the volume rocker to widen the gap.

## Step 8



- Continue prying to the lower corner of the phone.



## Step 9




- Carefully pry from the corner to the edge of the USB port.

## Step 10



- Insert the plastic opening tool at the other end of the USB port and slide around the corner.

## Step 11

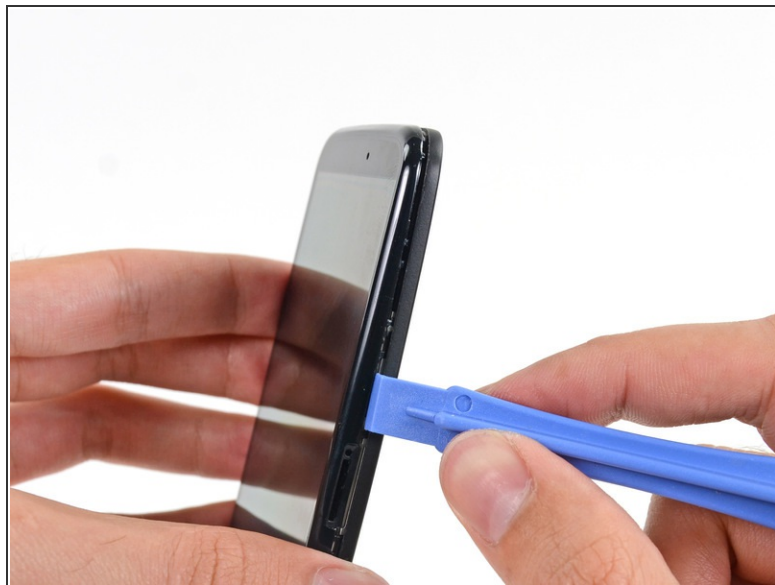



- Continue separating clips around the corner and along the length of the phone.

**i** Once you are certain the clips have all been separated, use the following two steps to prepare your iOpener.



## Step 12



-  We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
-  For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

## Step 13



- Heat the iOpener for thirty seconds.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ Always wait at least three minutes before reheating the iOpener.

## Step 14



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.
- ⚠ The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

## Step 15



- Lay the iOpener over the phone to loosen the adhesive securing the back cover. Let the bag sit on the device for approximately 90 seconds before attempting to remove the cover.

## Step 16



- Starting from the SIM slot side, carefully peel the back cover off of the phone.
- ⓘ The back cover is very flexible, but you don't want to damage any internal components by being too hasty.
- ⚠ **Do not** separate the back cover entirely; it is still connected to the phone by the camera flash cable.
- ⓘ The flash cable is attached on the power/volume button side of the phone.



## Step 17



- Gently set the back cover down in a way that exposes the camera flash cable connector, but does not put strain on it.

## Step 18



- Use the tip of a spudger to flip up the retaining flap on the flash cable ZIF connector.

⚠ Be sure to pry only on the flap itself, **not** on the connector.


- Pull the flash cable straight out of its socket.

## Step 19



- Separate the back cover from the phone.

## Step 20 — Back Cover

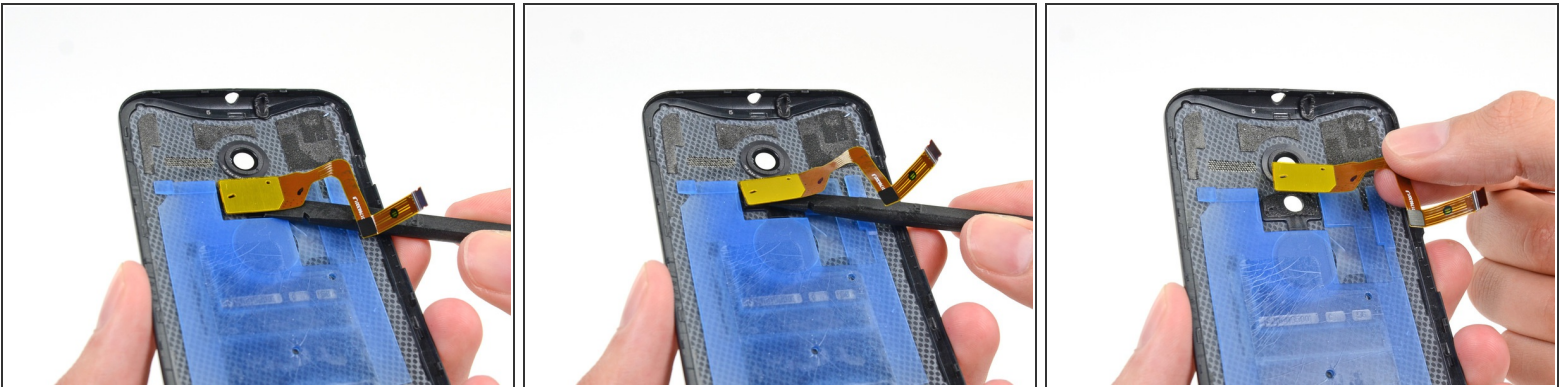

- Use the flat end of a spudger to gently pry between the flash assembly and back cover to separate the adhesive.
- Remove the flash assembly from the back cover.
- ⓘ You may also need to transfer the camera lens and the silicon pad from the rear case. These can be removed by prying carefully with a plastic opening tool.
- ☑ Depending on the adhesive on the rear case, you may need to tape the flash assembly down to secure it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 08:51:32 PM.